





ASSEMBLY INSTRUCTION

Model: U8879-PR-W/LED



Description: POWER RECLINER W LED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

PARTS LIST:


NO.	DESCRIPTION	SKETCH	Q'TY
A	Seat Body		1 PC
B	Backrest		1 PC
C	Left wing		1 PC
D	Right wing		1 PC

PARTS LIST:

NO.	DESCRIPTION	SKETCH	Q'TY
E	Power source		1 PC
F	Power source for led		1 PC


Step 1:

Attach Backrest (B) to the Seat (A).

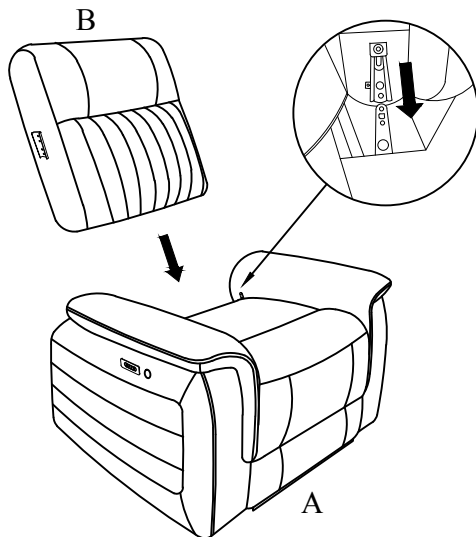


Step 2:

Attach the Left/Right Wings (C/D) to the Left/Right side of the Backrest (B).

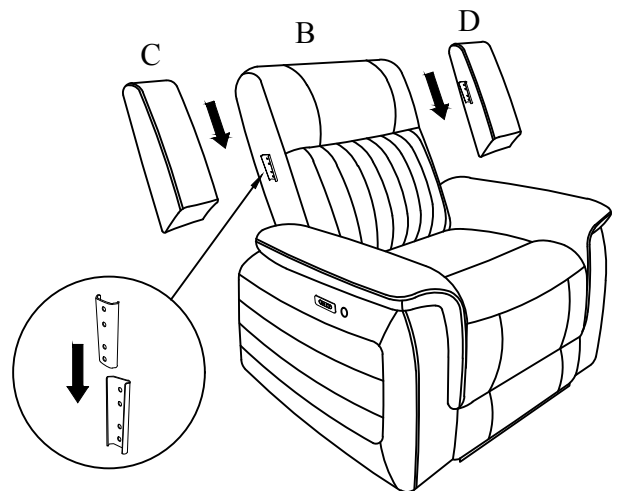


Step 3:

Connect the power wire under the Armrest frame to the Power source (E/F).

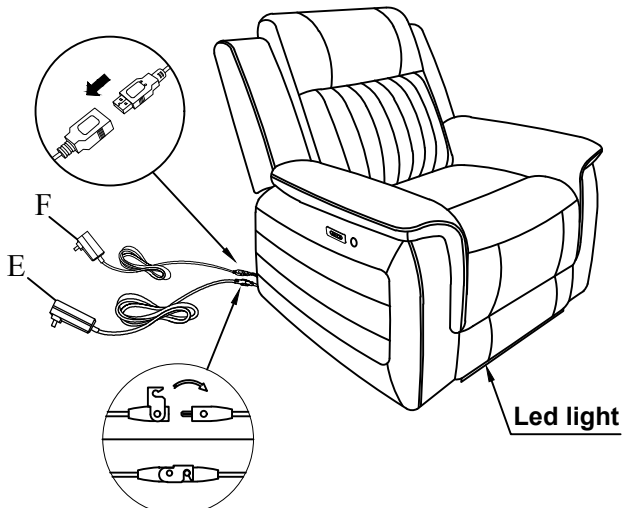

Step 4:

Open the Footrest by pressing the power button on/off.

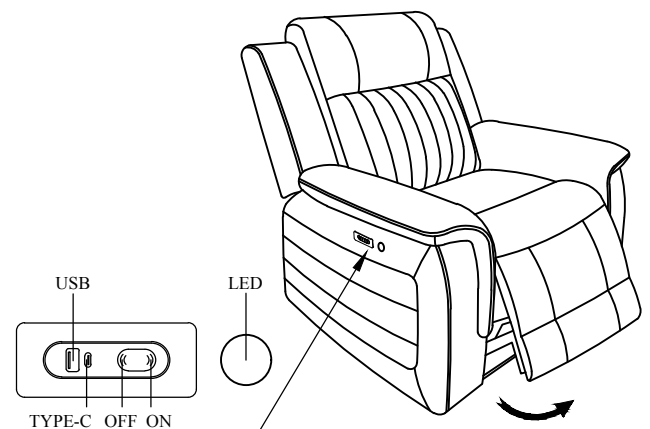

Made in Vietnam






ASSEMBLY INSTRUCTION

Description: POWER CONSOLE RECLINING
LOVESEAT W LED AND AUDIO SUBWOOFER




Model: U8879-PCRLS-W/LED-GL-SS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

PARTS LIST:


NO.	DESCRIPTION	SKETCH	Q'TY
A	Seat Body		1 PC
B	Left Backrest		1 PC
C	Console Backrest		1 PC
D	Right Backrest		1 PC
E	Left wing		1 PC

PARTS LIST:

NO.	DESCRIPTION	SKETCH	Q'TY
F	Right wing		1 PC
G	Power source		1 PC
H	Power source for led and subwoofer		1 PC


Step 1:

Attach Backrest (B/C/D) to the Seat (A).

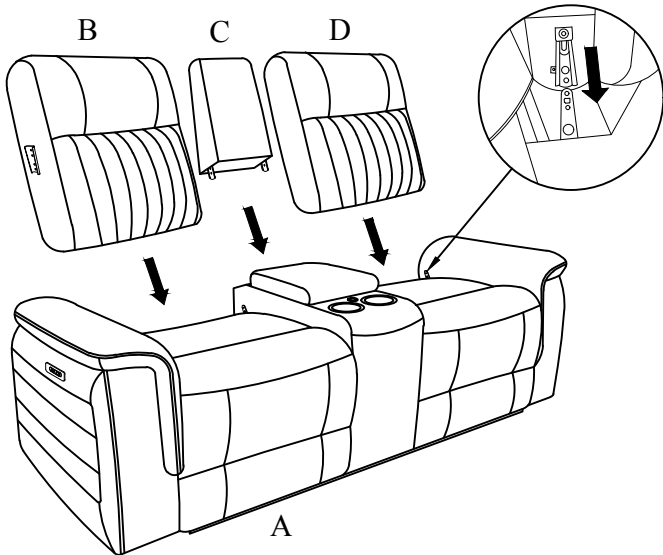


Step 2:

Attach the Left/Right Wings (E/F) to the Left/Right side of the Backrest (B/D).

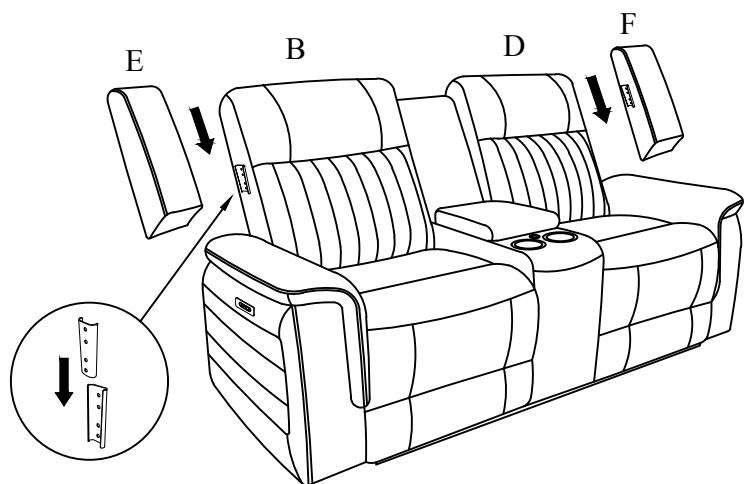


Step 3:

Connect the power wire under the Armrest frame to the Power source (G/H).

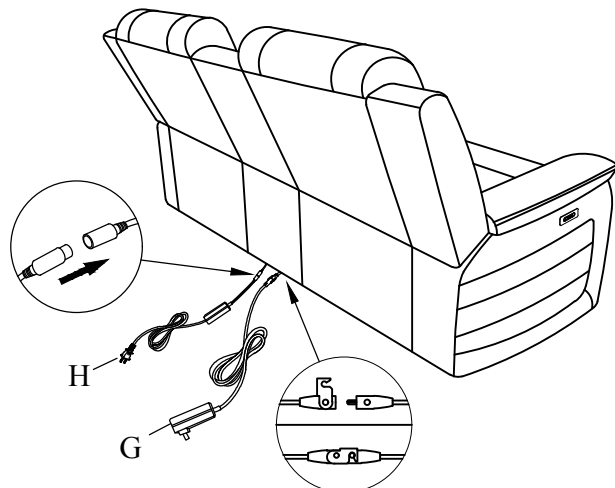

Step 4:

Open the Footrest by pressing the power button on/off.

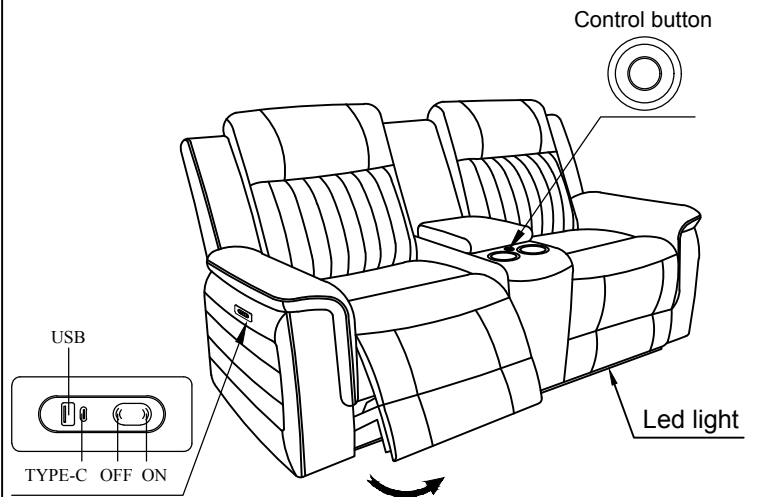

Made in Vietnam






ASSEMBLY INSTRUCTION

Description: POWER RECLINING
SOFA W LED & AUDIO SUBWOOFER




Model: U8879-PRS-W/LED-GL-SS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

PARTS LIST:


NO.	DESCRIPTION	SKETCH	Q'TY
A	Seat Body		1 PC
B	Left Backrest		1 PC
C	Middle Backrest		1 PC
D	Right Backrest		1 PC
E	Left wing		1 PC

PARTS LIST:

NO.	DESCRIPTION	SKETCH	Q'TY
F	Right wing		1 PC
G	Power source		1 PC
H	Power source for led and subwoofer		1 PC


Step 1:

Attach Backrest (B/C/D) to the Seat (A).

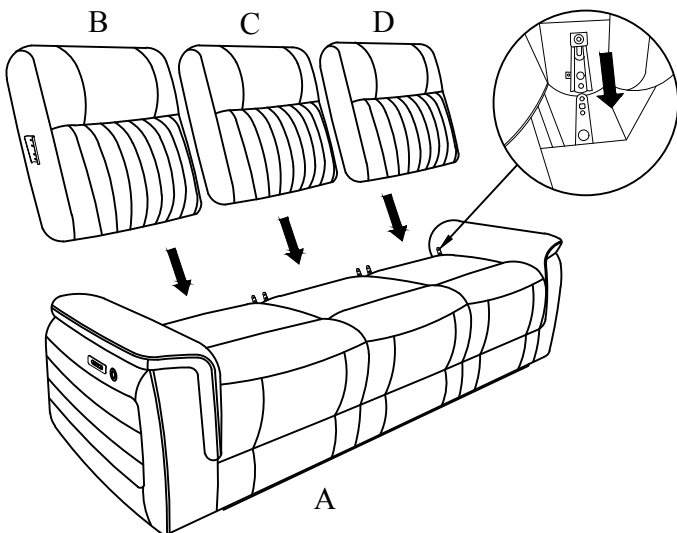


Step 2:

Attach the Left/Right Wings (E/F) to the Left/Right side of the Backrest (B/D).

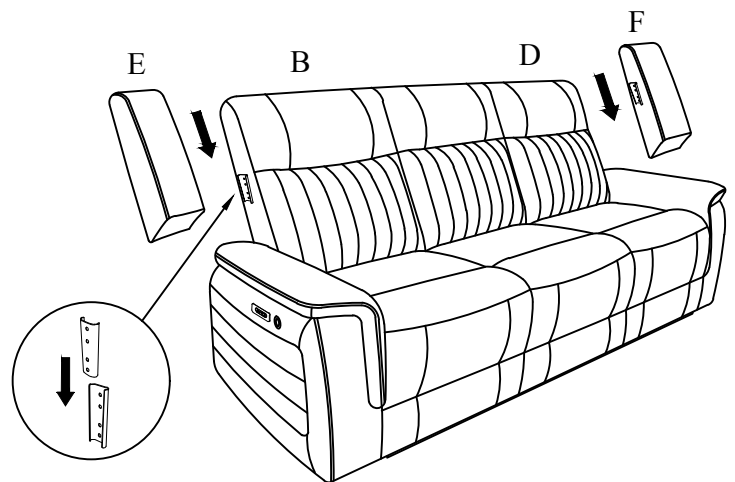


Step 3:

Connect the power wire under the Armrest frame to the Power source (G/H).

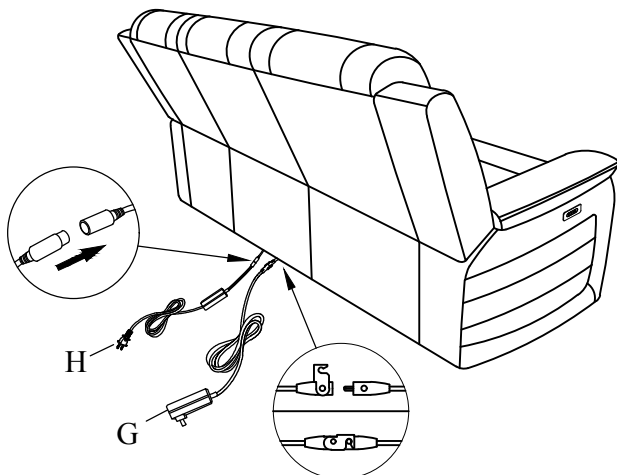

Step 4:

Open the Footrest by pressing the power button on/off.

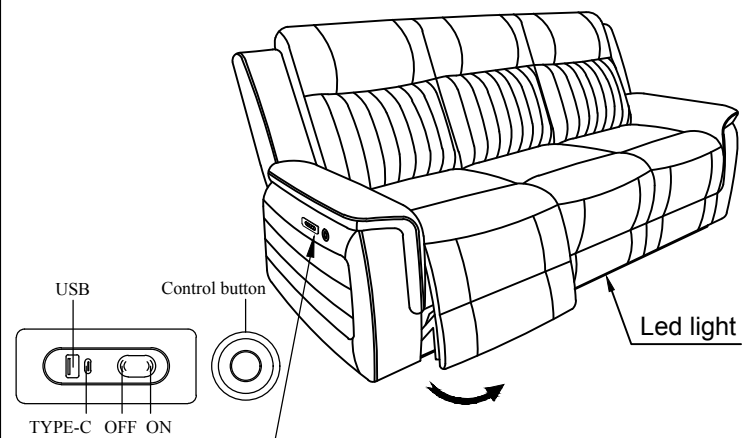

Made in Vietnam