




ASSEMBLY INSTRUCTIONS

**MODEL : 0295A
CHEST**

**(BOX 1)
BOX OF CHEST**

NO	ITEM	QTY
A	CHEST 	1 pc
B	BUN FOOT 	4 pcs



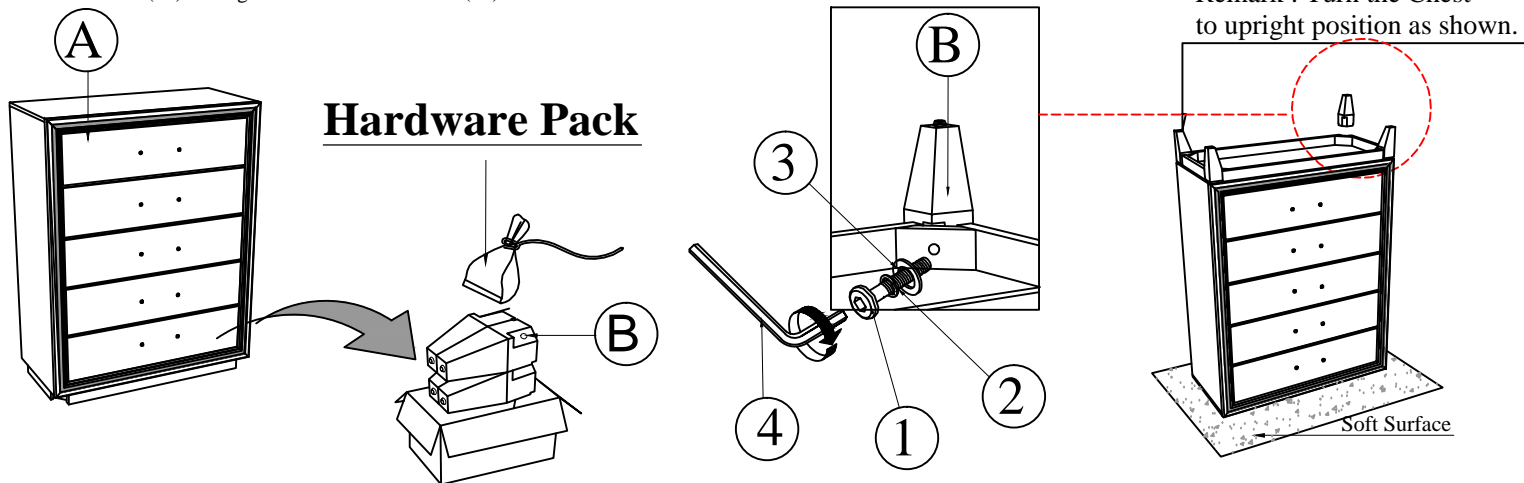

STEP 1 : Pull the drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Chest (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Wrench (4).




Remark : Turn the Chest to upright position as shown.

STEP 2 :


**(BOX 1)
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 pcs
2	Spring Washer 1/4" Rbw 	4 pcs
3	Flat Washer 1/4" ID x 19mm OD Bk 	4 pcs
4	ALLEN KEY m4x65mm Bk 	1 pc

Step 2.1

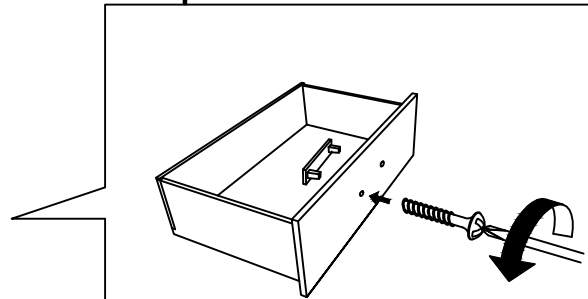

Step 2.2

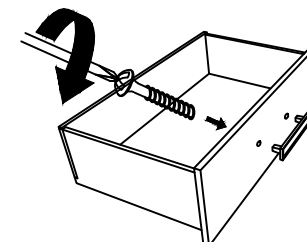

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.