




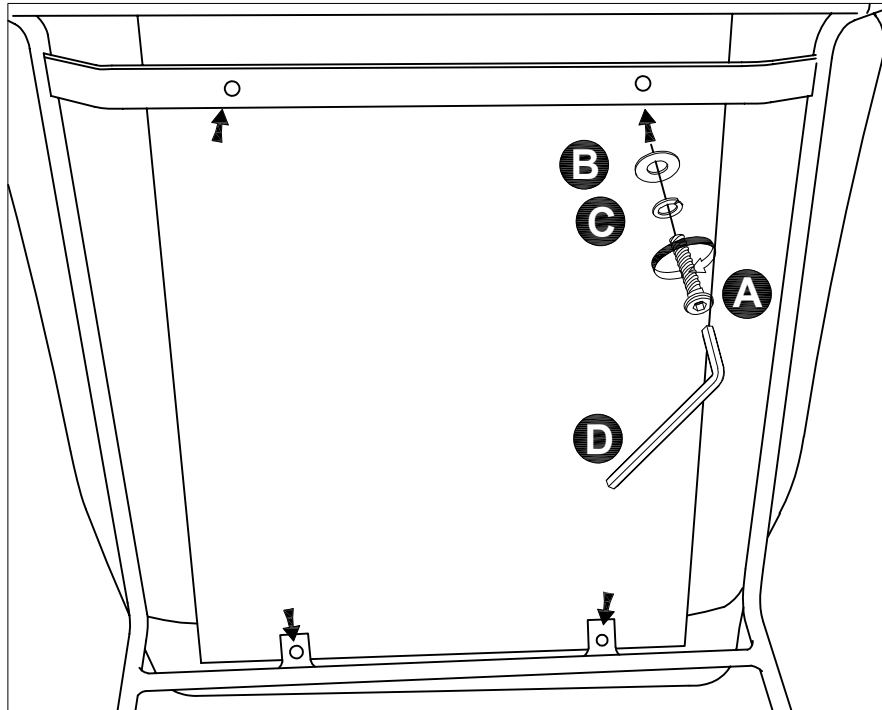


Assembly Instruction

Model: U8949

Assembly Parts Desc.		Qty.
A		JCBC Bolts M6x30mm 4 pcs
B		Flat Washer 4 pcs
C		Spring Washer 4 pcs
D		Allen Key M4x65mm 1 pc
E		Rubber Stopper For Metal Leg (For Replacement Use) 4 pcs




Step 1 :

Take the parts out from metal leg's box.

Step 2 :

Place a metal leg on to the bottom of the upholstery that you are building. Make sure the hole on the metal leg aligns with the hole on the bottom of the upholstery. Tighten the metal leg with the bolt (A), spring washer(C) and flat washer(B) by using the allen key(D).

COMPLETED

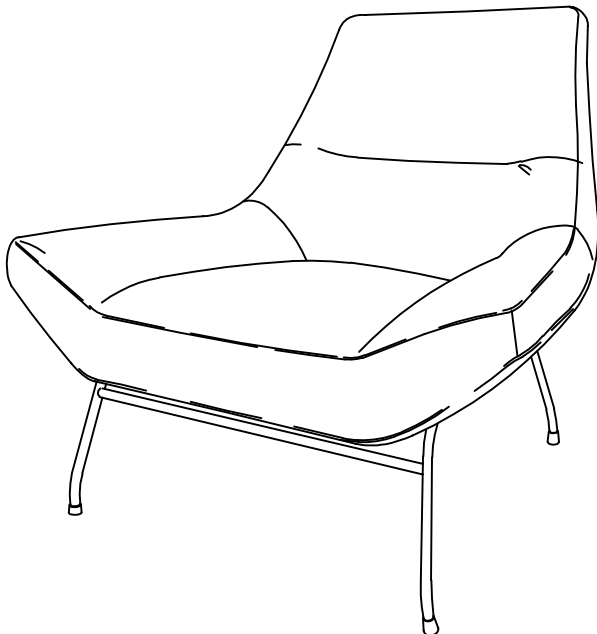

FOR LEATHER AND P.U (Code"X")

Clean by lightly brushing and vacuuming only to remove dust and particles buildup. Water-based foam cleaner or solvent based cleaning agents of any kind may cause excessive shrinking, staining or distortion of the surface pile and, therefore, should not be used.

FOR FABRIC (Code"WW")

- Use water-based agents only.
- Do not use solvents.
- Gently remove stains by blotting or hang washing.
- Do not use excessive brushing or rubbing.